

# QDS

## Quench Detection System

### 4-Channel Multi-Range Precision Digital Quench Detection System



## User Interface Manual



All Rights Reserved  
© ELS Instruments srl  
Rev. 3 – May 2026



This product is **CE** certified.

 **ELS Instruments srl**

Via Karl Ludwig Von Bruck 32– 34144 Trieste (TS)  
Italy

Mail: [info@caenels.com](mailto:info@caenels.com)

Web: [els-instruments.com](http://els-instruments.com)

*Registered office: Via Karl Ludwig Von Bruck 32, 34144 – Trieste (TS) - Italy*

# Table Of Contents

<b>1. INTRODUCTION.....</b>	<b>5</b>
1.1 THE MAIN WINDOW .....	5
1.2 ADDITIONAL FEATURES .....	6
1.2.1 <i>Monitoring window</i> .....	6
1.2.2 <i>Configuration window</i> .....	8
1.2.3 <i>Correction window</i> .....	9
1.2.4 <i>Logger window</i> .....	10



<b>Document Revision</b>	<b>Date</b>	<b>Comment</b>
0.1	August 26 <sup>th</sup> , 2021	Document created
1	August 22 <sup>nd</sup> , 2024	Updated address and revision numbering
2	March 4 <sup>th</sup> , 2025	GUI pictures updated, compatible with QDS Viewer 1.0.0. Text revised in all sections.
3	May 12 <sup>nd</sup> , 2026	Added Data Logger feature




# 1. Introduction

This chapter describes the main features of the QDS Viewer user interface for the QDS – Quench Detection System.

## 1.1 The main window

**Figure 1** shows the main window of the *QDS Viewer* interface with the following features:

- 1) *Refresh button* – discover ELS devices on the network (broadcast);
- 2) *Actions button* – connect to the device and start data acquisition, or disconnect from the device and stop data acquisition;
- 3) *Device Info box* – summary of the main information about the device;
- 4) *Additional Features* – monitoring, configuration and correction windows;

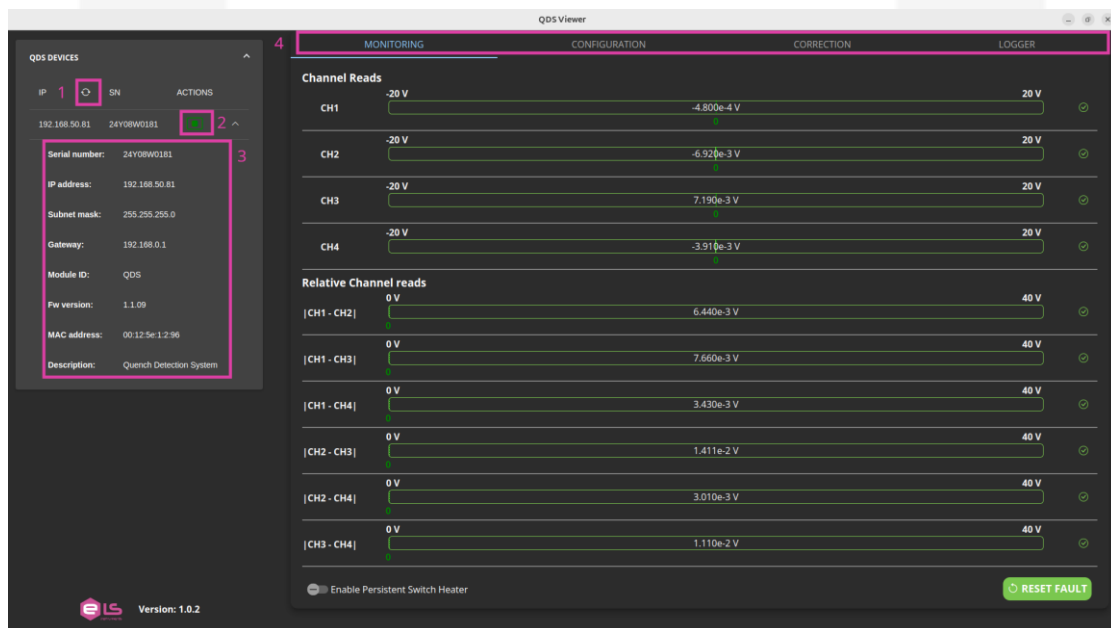

**Figure 1:** Main window

## 1.2 Additional Features

### 1.2.1 Monitoring window

The “*Monitoring window*” is the main window of the QDS device. Each channel is represented by a horizontal bar which can be highlighted in green (channel enabled), grey (channel disabled) or red (channel in fault condition).

The window has the following main characteristics:

- 1) These numbers indicate +Full Scale (*1a*) and -Full Scale (*1b*);
- 2) These are the real/time voltage readings in [V]. The dashed vertical bars and values (*2a*) indicate the thresholds positions with respect to the total length of the horizontal bar. The zero value of the thresholds are reported in green (*2b*) at the center of horizontal bar below the voltage reading;
- 3) This is one of the two clickable buttons of the monitoring window and can be used to Enable/Disable the *persistent switch heater*, OFF (0 [V]) or ON (12 [V] or 24 [V]);
- 4) This button has a double function: it indicates status of the QDS and it can be used to reset the status of the QDS. In normal operation (No fault condition) the icon is green (as in **Figure 2**), while in fault condition the icon becomes red (as reported in **Figure 3**). By clicking the “*reset fault*” button the fault conditions are cleared.


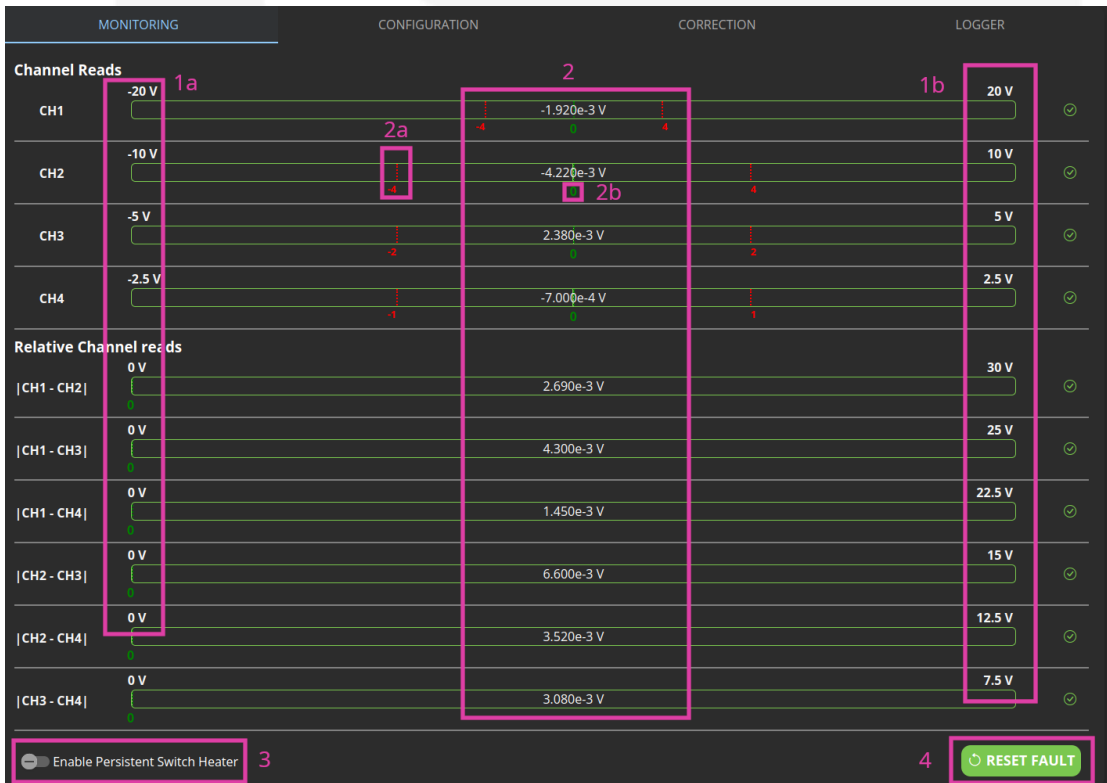


Figure 2: Monitoring window

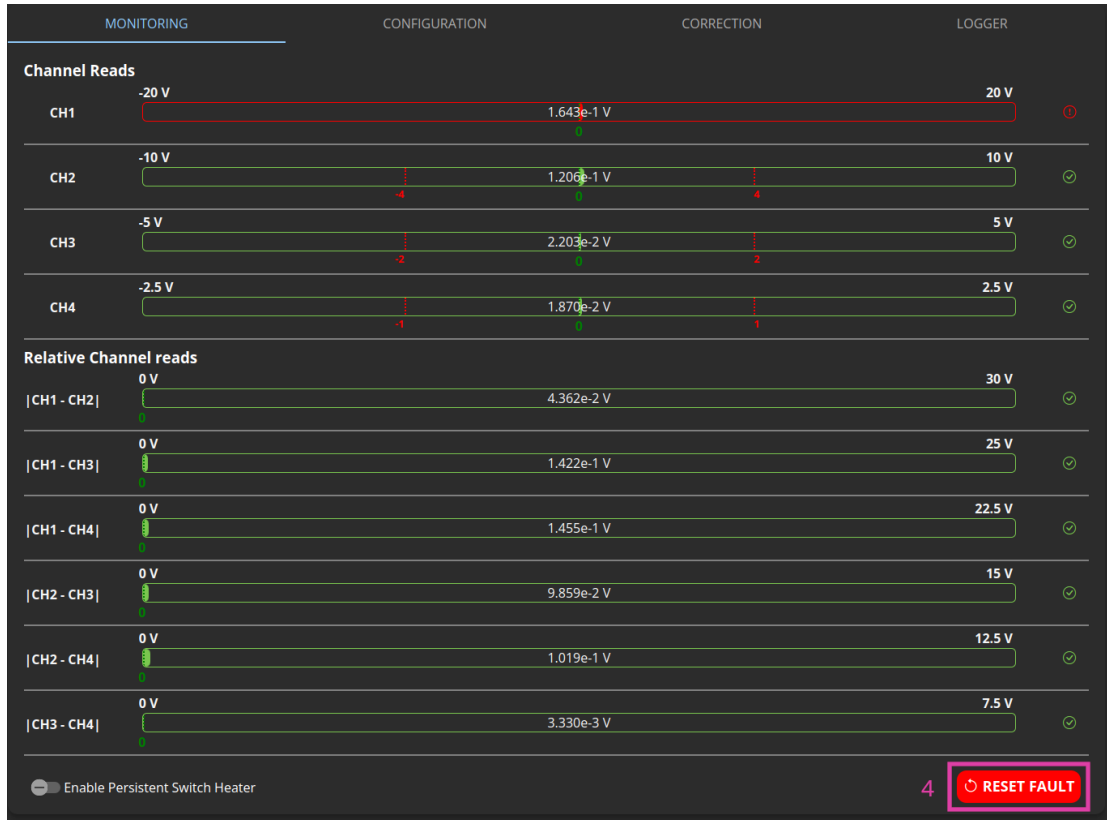


**Figure 3:** Monitoring window in fault condition.

## 1.2.2 Configuration window

**Figure 4** shows the “*Configuration window*” which can be used to configure all the main parameters of the QDS device. When changing a parameter, the new value is applied by pressing “enter” (on the keyboard) or by mouse-clicking on an random area of the configuration window.

On the configuration window the following configurations are available:

1. Enable the selected channels;
2. Select the range of the corresponding channel;
3. Indicates the full scale of the corresponding channel depending on the actual range;
4. Set the thresholds in [V];
5. Set the time windows in [ms].
6. *Store Configuration* button: saves enabled channels, thresholds and time windows in the non-volatile memory. The saved configuration will be loaded by default at the next start-up. **For safety reasons the range values are not saved in the volatile memory and the ranges are always set to range 0 (the higher range) at start-up;**
7. *Restore Default* button: restores default ranges, thresholds and time windows (see the “*Quench Detection System Commands Reference Manual*” for more information). This parameters are applied in real-time but not saved in the non-volatile memory. To save them use the *store configuration* button;

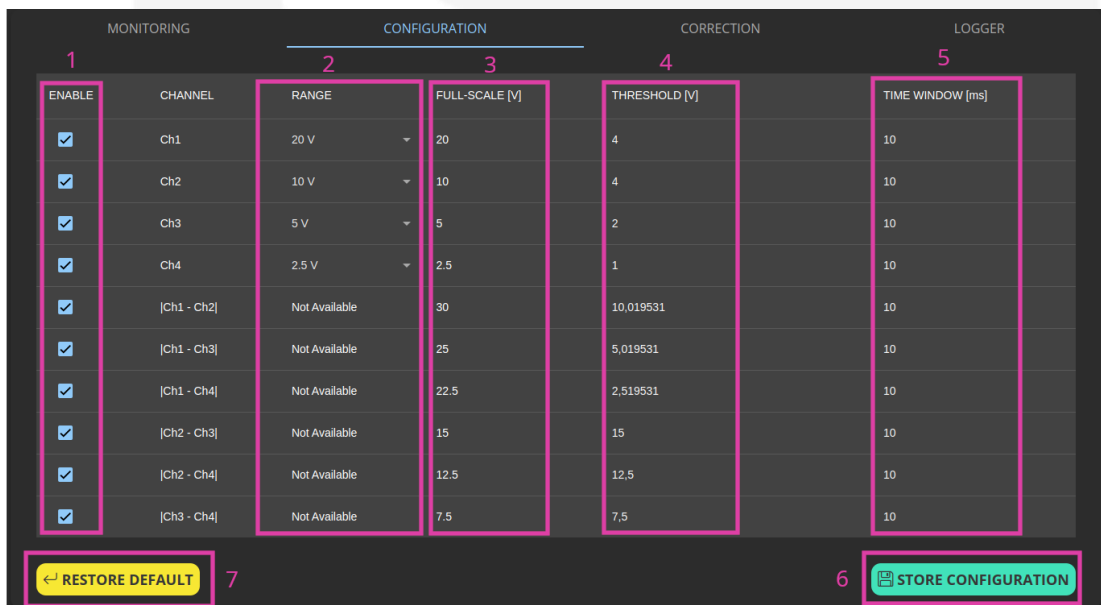

**Figure 4:** Configuration window

### 1.2.3 Correction window

The “*Correction*” window allows the user to set an additional offset on specific channels and specific ranges (box 1 in **Figure 5**). Use the “*Enable user correction*” button (box 2 in **Figure 5**) to enable immediately the user correction offsets.

Use the “*Save user correction*” button (box 3 in **Figure 5**) to save the user correction offsets in the non-volatile memory ready to be loaded at the next start-up.




**Figure 5:** User Offset Correction window

## 1.2.4 Logger window

**Figure 6** shows the “*Logger window*” which can be used to record data from the QDS device and download the recording once the logger is stopped. The user can select which channels to record and the sampling time (*Time Window*) to collect the data.

On the logger window the following configurations are available:

1. Set time window of acquisition (**Figure 6 - (1)**)
2. Enable/Disable channels to record (**Figure 6 - (2)**)
3. Delete all files of the selected day (**Figure 6 - (3)**)
4. Download csv with recorded data (**Figure 6 - (3a)**)
5. Delete single acquisition (**Figure 6 - (3b)**)
6. Start or stop the acquisition (**Figure 6 - (4)**)

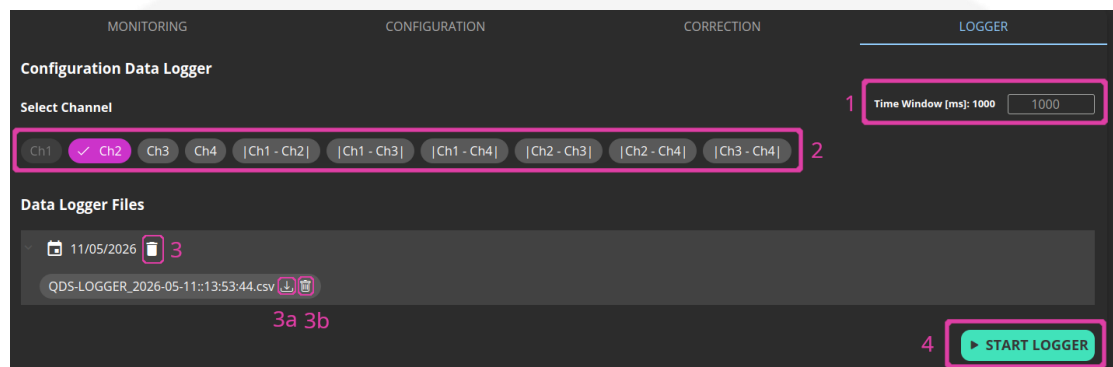

**Figure 6:** Data Logger window